

OPERATING AND CONFIGURATION MANUAL FOR THE THERMIFOL TF-H6 THERMOSTAT

CHARACTERISTICS AND TECHNICAL DATA

Thank you for purchasing our product. We hope that you will enjoy using the THERMIFOL TF-H6 thermoregulator. It is a fully functional controller of installations and heating devices providing the highest comfort of use, as well as precise and useful functions that will allow you to fully control the climate in your rooms. The display of the thermoregulator and its basic technical parameters are presented below.



Programming the TF-H6 thermoregulator – instructional video on Youtube

Supply voltage: 240V AC 50/60 Hz • Colour: White • Built-in air temperature sensor: NTC • External floor air temperature sensor: NTC (optional) • Maximum switched amperage: 16A • Programmable temperature range: 1÷70 °C • Factory programmed temperature range: 5÷35 °C • Accuracy: ±0.5 °C • External dimensions (without frame): 55 mm x 55 mm • External dimensions (with frame): 82 mm External dimensions (with frame): 82 mm x 82 mm (modular system available) • IP31

THERMOSTAT INSTALLATION, ELECTRIC CONNECTIONS

The THERMIFOL TF-H6 is a modern, programmable thermoregulator with LED control panel intended for controlling electric heating systems. Thermoregulator works with a built-in NTC temperature sensor and an external floor NTC temperature sensor, which is included in the kit along with the thermoregulator. Prior to its installation, disassembly, cleaning, inspection or change of the configuration, always disconnect the thermoregulator from the power source, e.g., by switching off the power line in the electric switchboard. Read the entire contents of this manual before installing the thermoregulator. In the territory of the Republic of Poland, the electric connections of the thermoregulator should be made by an electrician holding a valid SEP license for electric installations up to 1 kV. The electric installation supplying the thermoregulator should meet the requirements specified in the Regulation of the Minister of Infrastructure and Construction on technical conditions to be met by buildings and their location (Journal of Laws of 7 June 2019, item 1065) along with reference.

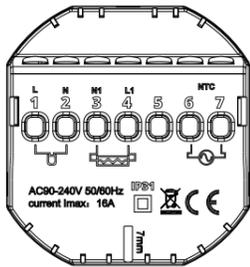


Figure 1. Description of the thermoregulator terminal block

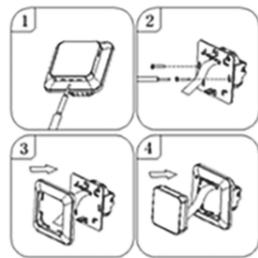


Figure 2. Disassembly of the thermoregulator

The thermoregulator is designed for the installation in a 60 mm electric installation box. For the purpose of the installing, it in the installation box and making the electric connections, you should open its housing very gently (so as not to break the connection tape) by removing the display unit according to the instructions in Figure 2 above. The installation of the thermoregulator should be planned in a place not exposed to the sunlight. Figure 1. shows the thermoregulator terminal block used to make the electric connections. The power supply line of the thermoregulator is connected to the terminals of the thermoregulator terminal block. The neutral wire (N) of the power supply line is connected to the terminal marked with number 2, and the phase wire (L) to the terminal marked with number 1. The heating device (heating mat, heating film) is connected to the terminals of the terminal block respectively, the neutral wire (N1) of the heating device power supply line is connected to the terminal marked with number 3. The external floor NTC temperature sensor should be connected to the terminals marked with numbers 6 and 7, where the polarity is irrelevant. Upon completing the installation and making the electric connections, configure the system according to the next section of this manual.

CONTROLLING – DESCRIPTION OF FUNCTIONS OF CONTROL BUTTONS

The graphic identification of the thermoregulator control panel buttons (display) is presented below. These buttons are multifunctional, i.e., depending on the operating status of the thermoregulator, and by varying the duration of the touch, it is possible to give various commands to the thermoregulator. The description of the buttons and the thermoregulator functions available with their use can be found below.

 Power ON/OFF button. In the thermostat off state, touching this button switches the thermostat on. In the operating state of the thermostat, touching it displays the clock on the display of this device. In order to turn the thermostat off, touch this button for at least 3 seconds.

 Menu button is used to change the operating mode of the thermoregulator from the manual to automatic schedule mode or holiday mode and vice versa while the thermostat is operating. If the thermoregulator operates in the holiday mode or automatic schedule mode, touching this button enables the manual mode and the possibility of changing the set air temperature. In the operating status of the thermoregulator touching this button and holding down the button for at least 5 seconds allows for enabling of the clock and date correction and schedule programming functions. In this case the button is also used to confirm individual changes and schedule parameters. When the thermoregulator is switched off, touching this button and holding the touch for minimum 5 seconds activates the wizard of advanced functions of the thermoregulator.

 Cursor button for dialling down. When the thermoregulator is switched on, touching and holding it down for more than 3 seconds switches the child lock on and off. A single touch causes that the temperature level set in the manual mode is displayed and repeated touches decrease its value.

 Cursor button for dialling up. When the thermoregulator is switched on, touching and holding down for more than 3 seconds makes it possible to have a read-out of the temperature measured by an external floor NTC temperature sensor. A single touch displays the temperature level set in the manual mode, and repeated touches increase its value.

When the thermoregulator is operating in automatic schedule mode, the buttons   allow for a temporary temperature correction for the current period of the automatic schedule of the thermostat.

DISPLAY ICONS – SPECIFICATION

 Icon with the numbers from 1 to 6 indicates the currently operated programme (period of one day and night -24 hrs.)

 icon indicating the current day of the week within the range from 1 to 7

 icon indicating enabling the child lock

 icon indicating enabling the anti-freeze function

 icons indicating the operation of the thermoregulator in a temporary mode within the current mode

 icon confirming the thermostat operation in the automatic schedule mode

 icon confirming the thermostat operation in the manual mode

 icon confirming power supply to the heating device by the thermostat

 icon indicating enabling the holiday mode

 icon indicating the thermostat operation in the holiday mode

CONFIGURATION OF BASIC PARAMETERS (TIME, OPERATION MODE)

The basic configuration of the thermostat includes setting the time and date (in the form of the number of the day of the week), and selecting the operation mode from the available 3 modes: manual, automatic and holiday mode.

Setting the time and date is done with the thermostat switched on. Hold the button  pressed for at least 3 seconds and then use the buttons   to select option 01 and confirm the selection by pressing the button . Minute, hour and day of the week are selected by an approval to be edited of the successive variables by pressing the button  in order to edit the selected variable and confirm the selection, as well as by pressing the buttons  . Programming the schedule is also performed with the thermoregulator switched on. Press and hold the button  for at least 3 seconds, then use the buttons   to select option 02 and confirm by pressing the button . The next program – a time period of day, minutes, hours - is selected by means of approving for editing, as well as by pressing the button in order to edit the selected variable and approving it upon setting the proper value using the buttons  .

P1	P2	P3	P4	P5	P6
Wake - up	Leaving home	Returning home	Leaving home	Returning home	Sleep
6:00	20 °C	8:00	15 °C	11:30	15 °C
				13:30	15 °C
				17:00	15 °C
					22:00
					15 °C

The holiday mode is enabled when the thermoregulator is turned on. Press and hold the button  down for at least 3 seconds, then use the buttons   to select option 03 and confirm the selection by pressing the button . The selection of days and temperature assigned to them is made by approving for editing the successive variables, as well as by pressing the button  to edit the selected variable and confirming it upon setting the appropriate value using the buttons  .

PROGRAMMING OF ADVANCED OPTIONS OF THERMOSTAT

The table below lists the advanced functions and programmable parameters of the thermostat. For the purpose of getting an access the advanced settings, turn off the thermostat by pressing the button  for more than 3 seconds. Then hold the button  down for a minimum of 5 seconds until the thermostat screen is illuminated. Single touches of the button  switch between successive functions/parameters and modification of the value of a given function/parameter is made using the buttons  . Moving to the next function/parameter saves the settings of the preceding one.

No.	Type of function / parameter	Range of parameter value / function option	Factory value
1	Calibration of air temperature sensor	-9 °C ÷ 9 °C	-1 °C
2	Hysteresis of air temperature sensor	0,5 °C ÷ 2,5 °C	1 °C
3	Hysteresis of external floor temperature sensor	1 °C ÷ 9 °C	2 °C
4	Selection of temperature sensors – Selection temperature control method	N1: only built-in temperature sensor is ON only. N2: only external floor temperature sensor is ON. N3: built-in and external floor temperature sensors are ON – maintaining the set air temperature with control of the heating device temperature	N3
5	Button locking	0: partial locking / 1: full locking	0
6	Limitation of maximum temperature of external floor sensor	20 °C ÷ 70 °C Note: setting a value below 20 °C will disable this function!	28 °C
7	Limitation of minimum air temperature	1 °C ÷ 10 °C Note: setting a value above 10 °C will disable this function!	5 °C
8	Minimum value of programmed temperature	1 °C ÷ 10 °C	5 °C
9	Maximum value of programmed temperature	20 °C ÷ 70 °C	35 °C
A	Decalcification function (for water boilers)	0: enabled / 1: disabled	0
B	Memory function of device status prior to a power supply failure	0: Device restores its state prior to a power failure 1: Device remains OFF after power supply returns 2: Device remains ON after power supply returns	0
C	Type of automatic operation schedule (by weekdays)	0: 5+2 days / 1: 6+1 days / 2: 7 days	0
D	Sleep mode – configuration of display parameters	0: nothing is displayed in standby mode 1: temperature is displayed in standby mode 2: temperature is displayed – higher brightness in standby mode	2
E	Restoration of factory settings	Hold down the button  for more than 5 seconds after selecting this option	Ao
F	Open window detection function (range of temperature function enable)	10 °C ÷ 20 °C	10 °C
H	Period of execution open window detection function	10 min ÷ 20 min	10 min
P1	Power consumption of previous day	XXXX kWh, long press  to clear the data	
P2	Total power consumption	XXXX kWh, long press  to clear the data	
P3	Rate power of heating device	XXXX W, Setting range: 100-3500W	2000W

Turn off thermostat, long press  and  to enter advance option P. Short press  to choose item, short press  or  to change the value.

Hysteresis of the external floor sensor – additional information: the limit of temperature value measured by the external floor sensor is of 28 °C for the factory setting of advanced options (section 6), and the factory value of external floor sensor hysteresis (section 3) is of 2 °C. When the temperature rises to 28 °C, the thermostat stops supplying the controlled heating device and reminds you of the high temperature alarm by displaying the flashing symbol . If the temperature measured by the external floor sensor decreases to 26 °C, the thermostat will start supplying the controlled heating device again and the symbol  will stop flashing (only if the air temperature in the room is lower than the set temperature).

Error codes displayed by the thermostat. A correct configuration of the built-in and external floor temperature sensors must be provided according to section 4 related to the advanced options. An incorrect selection or a sensor malfunction (failure) will cause an error message to be displayed on the screen. Displaying the message with the following content: 'E1' means a malfunction of the built-in temperature sensor, while displaying a message of the following content 'E2' means that the external floor temperature sensor has failed. The thermostat will not supply power to the controlled heating device until the fault has been rectified!